3 Configuration

Use the “Installer Mode” menu or the Sonnex Tools software (part of Crestron Toolbox™ software) to configure a Sonnex system.

Use the SWAMP-24X8’s “Installer Mode” menu to configure an entire SWAMP 24X8 system using only the front panel controls.

To enter the “Installer Mode” menu, press and hold the ▼ and ▲ buttons for approximately five seconds. The “Installer Mode” menu is displayed.

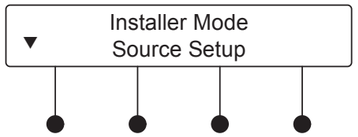

Press the ▼ or ▲ buttons to scroll through the available choices below and press **ENTER**.

- *Source Setup*: Select this option to adjust the compensation level for each input source.
- *Zone Setup*: Select this option to configure each output zone’s settings for audio, Sonnex links (busses), bridging (with other outputs) and power output.
- *Expander Status*: Select this option to view the status of each connected SWAMPE Sonnex Multiroom Audio Expander.
- *Amplifier Status*: Select this option to view the settings and operating status of each of the SWAMP-24X8 amplifiers as well as the amplifiers of connected SWAMPE Multiroom Audio Expanders.
- *Network Setup*: Select this option to configure and view the Ethernet settings of the SWAMP-24X8.
- *Control Setup*: Select this option to configure the SWAMP-24X8 for use with a Crestron control system and lock/unlock the front panel controls.
- *About*: Select this option to view information about the firmware.

Alternatively, Sonnex Tools software can be used to quickly configure a system using a simple-to-use graphical interface. For more information, refer to the Sonnex Tools help file.

4 Operation

The SWAMP-24X8 can be controlled from the front panel or Sonnex Tools software in Crestron Toolbox.

NOTE: For more information, refer to the Crestron Toolbox help file.

When operated from the front panel, the SWAMP-24X8 operates in either the *Zone* mode or *Source* mode.

Use the “Main” menu to select *Zone* mode or *Source* mode. To display the “Main” menu, press **MENU** until *Main Menu* appears.

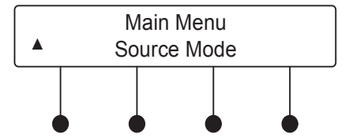

Power

To turn on the SWAMP-24X8 move the **POWER** switch to |. To turn off the SWAMP-24X8, move the **POWER** switch to ⏻.

Zone Mode

The *Zone* mode uses the front panel to route a source signal to a selected zone. To use the *Zone* mode:

1. From the “Main” menu, press the ▼ or ▲ buttons to display *Zone Mode* and press **ENTER**.
2. Press the **ZONE** button of the zone to be controlled.
3. Press the **SOURCE** button of the source to be routed. The associated **SOURCE** and **ZONE** LEDs light. Alternatively, press the **ZONE** button twice to turn on the zone and connect the last-selected source.
4. Press **MENU** to return to the “Main” menu.

Source Mode

The *Source* mode uses the front panel to select a source signal and route it to multiple zones. To use the *Source* mode:

1. From the “Main” menu, press the ▼ or ▲ buttons to display *Source Mode* and press **ENTER**.
2. Press the **SOURCE** button of the source to be routed. The associated **SOURCE** LED lights.
3. Press the **ZONE** button(s) of the zone(s) to be selected. The associated **ZONE** LED(s) lights. To remove a zone from a source, press the desired **ZONE** button. The associated **ZONE** LED turns off.
4. Press **MENU** to return to the “Main” menu.

Volume Control

To raise the volume in the selected zone(s), turn the **VOLUME** knob clockwise. To lower the volume in the selected zone(s), turn the **VOLUME** knob counterclockwise.

The specific patents that cover Crestron products are listed at patents.crestron.com.

Crestron, the Crestron logo, Cresnet, Crestron Toolbox, and Sonnex are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Other trademarks may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. ©2012 Crestron Electronics, Inc.

For details, refer to the latest revision of the **SWAMP(I)-24X8** Operations Guide, Doc. 7049.

QUICKSTART DOC. 7050C (2028551) 07.12

www.crestron.com | 888.273.7876 | 201.767.3400

Specifications subject to change without notice.

CRESTRON